

ab102522

Xanthine Oxidase Assay Kit

Instructions for Use

For the rapid, sensitive and accurate measurement of Xanthine Oxidase activity in various samples.

View kit datasheet: www.abcam.com/ab102522 (use www.abcam.cn/ab102522 for China, or www.abcam.co.jp/ab102522 for Japan)

This product is for research use only and is not intended for diagnostic use.

PLEASE NOTE: With the acquisition of BioVision by Abcam, we have made some changes to component names and packaging to better align with our global standards as we work towards environmental-friendly and efficient growth. You are receiving the same high-quality products as always, with no changes to specifications or protocols.

Table of Contents

| 1. | Overview | 3 |
|----|------------------------|----|
| 2. | Protocol Summary | 4 |
| 3. | Components and Storage | 5 |
| 4. | Assay Protocol | 7 |
| 5. | Data Analysis | 10 |
| 6. | Troubleshooting | 12 |

1. Overview

Xanthine oxidase (XO, EC 1.17.3.2) is present in appreciable amounts in the liver and jejunum in healthy individuals. However, in various liver disorders, XO is released into circulation. Therefore, determination of serum XO level serves as a sensitive indicator of acute liver damage such as jaundice.

Abcam's Xanthine Oxidase Assay Kit is an easy and sensitive assay to determine XO in variety of samples. In the assay, XO oxidizes xanthine to hydrogen peroxide (H_2O_2) which reacts stoichiometrically with OxiRed Probe to generate color (at λ = 570 nm) and fluorescence (at Ex/Em = 535/587 nm). Since the color or fluorescence intensity is proportional to XO content, the XO activity can be accurately measured. The kit detects 1-100 mU xanthine oxidase in 100 µl reaction volume.

2. Protocol Summary

Sample Preparation

Standard Curve Preparation

Prepare and Add Reaction Mix

Measure Optical Density or Fluorescence

3. Components and Storage

A. Kit Components

| Item | Quantity |
|--|----------|
| Assay Buffer VII/XO Assay Buffer | 25 mL |
| OxiRed Probe/OxiRed™ Probe (in DMSO) | 200 μL |
| Developer Solution V/XO Enzyme Mix (Lyophilized) | 1 vial |
| XO Substrate Mix/XO Substrate Mix (Lyophilized) | 1 vial |
| H ₂ O ₂ Standard/H ₂ O ₂ Standard (0.88 M) | 0.1 mL |
| Xanthine Enzyme Mix | 1 vial |

^{*} Store kit at -20°C, use within 2 months. Read the entire protocol before performing the assay.

PLEASE NOTE: With the acquisition of BioVision by Abcam, we have made a change to this product. Older lots of this kit were supplied with an XO Positive Control vial instead of Xanthine Enzyme Mix. Resuspension instructions for both are outlined below. There have been no changes to protocol or kit function.

OxiRed PROBE: Ready to use as supplied. Warm to room temperature to melt frozen DMSO before use. Store at -20°C, protect from light and moisture. Use within 2 months

DEVELOPER SOLUTION V/XO ENZYME MIX, SUBSTRATE MIX,: Dissolve in 220 µl dH₂O. Pipette up and down to dissolve completely

XANTHINE ENZYME MIX: Dissolve in 250 μ l dH₂O. Pipette up and down to dissolve completely. Directly before use, dilute by mixing 5 μ l Xanthine Enzyme Mix with 45 μ l of water to create a positive control working solution.

Or

XO Positive Control (Older lots): Dissolve in 100 μl dH2O. Pipette up and down to dissolve completely.

B. Additional Materials Required

- Microcentrifuge
- Pipettes and pipette tips
- Colorimetric or fluorescent microplate reader
- 96-well plate
- Orbital shaker

4. Assay Protocol

1. Sample Preparation:

- a. For serum samples: Serum can be directly added into sample wells, and adjust volume to 50 µl/well with dH₂O.
- b. For tissue or cell samples: Tissues or cells can be extracted with 4 volumes of the Assay Buffer, centrifuge (16,000 x g, 10 min) to get clear XO extract.

Prepare test samples of up to 50 μ I/well with Assay Buffer in a 96-well plate.

For the **positive control**, add 5 μ l positive control working solution to wells, adjust volume to 50 μ l/well with dH₂O.

We suggest testing several doses of your sample to make sure readings are within the standard curve.

Note:

 ${\rm H_2O_2}$ in the sample will generate background. It is important to set up a background control.

2. Standard Curve Preparation:

Dilute 4 μ l of H₂O₂ Standard/0.88 M H₂O₂ Standard into 348 μ l dH₂O to generate 10 mM H₂O₂ Standard, then dilute 20 μ l of 10 mM H₂O₂ Standard into 980 μ l dH₂O to generate 0.2 mM H₂O₂ Standard.

- a. For the colorimetric assay: Add 0, 10, 20, 30, 40, 50 μ l of the 0.2 mM H₂O₂ Standard into 96-well plate in duplicates, bring the total volume to 50 μ l each well with dH₂O to generate 0, 2, 4, 6, 8, 10 nmol/well H₂O₂ Standard.
- b. For the fluorometric assay: Dilute 50 μ l fresh 0.2 mM H₂O₂ into 950 μ l dH₂O to generate 10 μ M H₂O₂ Standard. Add 0, 10, 20, 30, 40, 50 μ l of the 10 μ M H₂O₂ into 96-well plate in duplicates, bring volume to 50 μ l with dH₂O to generate 0, 0.1, 0.2, 0.3, 0.4, 0.5 nmol/well H₂O₂ Standard.
- 3. Reaction Mix: As H2O2 in the sample will generate background, we recommend to set up a background control for each sample. For standard, positive control and sample wells, use the Sample Reaction Mix. For background control wells for samples, use the Background Control Reaction Mix. Mix enough reagents for the number of assays and standard to be performed. For each well, prepare a total 50 μ l Reaction Mix containing:

Sample

Background

| | | Control |
|------------------------------------|-------|---------|
| Assay Buffer | 44 µl | 46 µl |
| Substrate Mix | 2 μΙ | |
| Developer Solution V/Enzyme Mix | 2 μΙ | 2 μΙ |
| OxiRed Probe* | 2 μΙ | 2 µl |

- * **Note:** For the fluorescent assay, dilute OxiRed probe/OxiRed™ probe 10X to reduce background readings.
- **4.** Add 50 μ I of the reaction mix to each well containing the H_2O_2 Standard, Positive Control, and test samples, mix well.
- **5.** Measure the plate immediately (OD = 570 nm for colorimetric assay or at Ex/Em = 535/587 nm for fluorometric assay) at T_1 to read A_1 , measure again at T_2 after incubating the reaction at 25°C for 10-20 min (or incubate longer time if the sample XO activity is low) to read A_2 , protect from light. The signal generated by XO is:

$$\Delta A = A_2 - A_1$$

Notes:

- a) It is essential to read A₁ and A₂ in the reaction linear range. It will be more accurate if you read the reaction kinetics. Then choose A₁ and A₂ in the reaction linear range.
- b) Read H_2O_2 standard after 20 min incubation without subtracting A_1 . The standard is stable for a few hours.

5. Data Analysis

Subtract background from all readings. For samples, subtract background control reading from sample reading before calculation of ΔA . Plot the H_2O_2 standard Curve. Apply sample ΔA to the H_2O_2 standard curve to get B nmol of H_2O_2 (H_2O_2 generated between T1 and T2 in the reaction by XO).

XO Activity =
$$\frac{\text{(B x Dilution Factor)}}{\text{(T}_2 - \text{T}_1) \text{ x V}} = \text{nmol/min/ml} = \text{mU/ml}$$

Where:


 \boldsymbol{B} is the amount of H_2O_2 (nmol) generated by XO from standard curve.

 T_1 is the time of the first reading (A_1) (in min).


 T_2 is the time of the second reading (A_2) (in min).

V is the pre-treated sample volume (ml) added into the reaction well.

Unit Definition: One unit xanthine oxidase is defined as the amount of enzyme catalyzes the oxidation of xanthine, yielding 1.0 μ mol of uric acid and H_2O_2 per minute at 25°C.

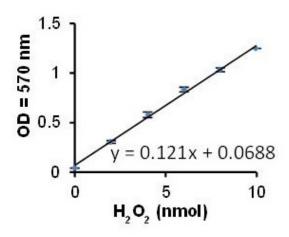

Xanthine Oxidase Positive Control

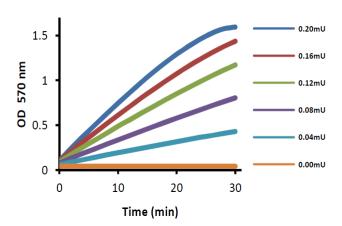

6. Troubleshooting

| Problem | Reason | Solution |
|--------------------|--|--|
| Assay not working | Assay buffer at wrong temperature | Assay buffer must not be chilled - needs to be at RT |
| | Protocol step missed | Re-read and follow the protocol exactly |
| | Plate read at incorrect wavelength | Ensure you are using appropriate reader and filter settings (refer to datasheet) |
| | Unsuitable microtiter plate for assay | Fluorescence: Black plates (clear bottoms); Luminescence: White plates; Colorimetry: Clear plates. If critical, datasheet will indicate whether to use flat- or U-shaped wells |
| Unexpected results | Measured at wrong wavelength | Use appropriate reader and filter settings described in datasheet |
| | Samples contain impeding substances | Troubleshoot and also consider deproteinizing samples |
| | Unsuitable sample type | Use recommended samples types as listed on the datasheet |
| | Sample readings are outside linear range | Concentrate/ dilute samples to be in linear range |

| Samples with | Unsuitable sample type | Refer to datasheet for details about incompatible samples |
|---------------------------------|--|---|
| inconsistent readings | Samples prepared in the wrong buffer | Use the assay buffer provided (or refer to datasheet for instructions) |
| | Samples not deproteinized (if indicated on datasheet) | Use the 10kDa spin column (ab93349) |
| | Cell/ tissue samples not sufficiently homogenized | Increase sonication time/ number of strokes with the Dounce homogenizer |
| | Too many freeze- thaw cycles | Aliquot samples to reduce the number of freeze-thaw cycles |
| | Samples contain impeding substances | Troubleshoot and also consider deproteinizing samples |
| | Samples are too old or incorrectly stored | Use freshly made samples and store at recommended temperature until use |
| Lower/ Higher readings in | Not fully thawed kit components | Wait for components to thaw completely and gently mix prior use |
| samples and standards | Out-of-date kit or incorrectly stored reagents | Always check expiry date and store kit components as recommended on the datasheet |
| | Reagents sitting for extended periods on ice | Try to prepare a fresh reaction mix prior to each use |
| | Incorrect incubation time/ temperature | Refer to datasheet for recommended incubation time and/ or temperature |
| | Incorrect amounts used | Check pipette is calibrated correctly (always use smallest volume pipette that can pipette entire volume) |

| Problem | Reason | Solution |
|------------------------------------|--|--|
| Standard curve is not linear | Not fully thawed kit components | Wait for components to thaw completely and gently mix prior use |
| | Pipetting errors when setting up the standard curve | Try not to pipette too small volumes |
| | Incorrect pipetting when preparing the reaction mix | Always prepare a master mix |
| | Air bubbles in wells | Air bubbles will interfere with readings; try to avoid producing air bubbles and always remove bubbles prior to reading plates |
| | Concentration of standard stock incorrect | Recheck datasheet for recommended concentrations of standard stocks |
| | Errors in standard curve calculations | Refer to datasheet and re-check the calculations |
| | Use of other reagents than those provided with the kit | Use fresh components from the same kit |

For further technical questions please do not hesitate to contact us by email (technical@abcam.com) or phone (select "contact us" on www.abcam.com for the phone number for your region).



Technical Support

Copyright © 2023 Abcam. All Rights Reserved. The Abcam logo is a registered trademark. All information / detail is correct at time of going to print.

For all technical or commercial enquiries please go to:

www.abcam.com/contactus

www.abcam.cn/contactus (China)

www.abcam.co.jp/contactus (Japan)